

Alarm or Siren Padlock



Alarm or Siren Padlock

Rating: Not Rated Yet

[Ask a question about this product](#)

Manufacturer: [Kinbar](#)

Description

Operating Instructions:

- Insert key, turn in clockwise direction and remove shackle
- Replace shackle into lock with groove towards key port
- The lock will "beep", at this point remove the key and the alarm will set after 15 seconds
- When the lock is vibrated twice within 5 seconds the alarm will sound. The 5 second delay allows the lock to be opened by key without sounding
- The alarm sounds in 10 second intervals. The alarm will keep sounding with constant movement or vibration.
- Once stopped the alarm will re-set after 35 seconds

NOTE:

To use as an ordinary padlock without the alarm, simply insert the shackle with the groove away from the key port. If using on moving vehicles or equipment use as an ordinary padlock without the set alarm until stationary, after which you may set the alarm.

BATTERY REPLACEMENT:

1. Remove the shackle and look through the shackle holes where you will notice 2 screws, one on each shackle hole.
 2. Remove the 2 screws with a star screwdriver
 3. The lower cover will then come off and you can replace the batteries.
 4. Be sure to pay attention to polarity and that cover goes on same way it came off.
 5. Batteries should last 2 years under normal operating situations (12 batteries included, in sets of 6 each)
- One set of the batteries comes along with the padlock and the other set is a spare to use once the first set is exhausted.

Padlocks : Alarm or Siren Padlock

Reviews

There are yet no reviews for this product.